

AUDIPACK

Industriestraat 2-4
2751 GT Moerkapelle
The Netherlands
www.audipack.com

Tel: +31-(0)79 5931671
Fax: +31-(0)79 5933115
email: audipack@audipack.com



Plasma screen Stand (Presentation Display 390501) Manual

The complete set consists of the following parts:

Note: the numbers also represent the order of assembly.

1. Foldable support
2. Feet, foldable in two
3. Back-plate
4. Clamp (Other type than on the photo)
5. 4 star knobs (part of the clamp)
6. The specific Monitorbracket (**not on the photo**) for the relevante type of Plasma-screen

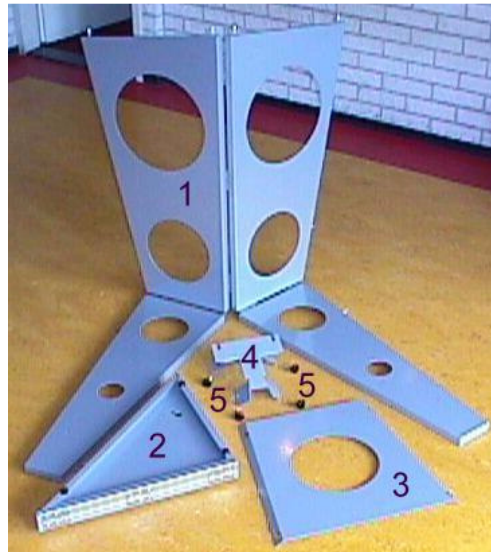


Photo 1

Position the support as indicated on photo 2. The 2 sides must be placed in an angle of approx. 40°-45° of each other. This makes mounting of the feet much easier.

Hook the front mounting knobs (see photo 7) of the support through the front holes of the feet (no. 1 on photo 2). Pull the feet back so that the front mounting knobs slide in to the smaller part of the hole. Do not tight the knobs yet!! First hook the 2 back mounting knobs (no. 2 on photo 2) of the support through the holes in the feet and pull them in the small part of the hole. Tighten first the 2 back mounting knobs (No. 2 on photo 2) firmly (by hand) by turning them clock-wise, then follow with the front 2 mounting knobs (no. 1 on photo 2).

Make sure that the small part of the mounting knob (the part the arrow points at on photo 7) goes through the small part of the hole before tighten it. Do not use tools for this. The placing of the actual Plasma screen in the end will give extra strength.



Photo 2

Fold back the parts laying on the ground and turn the Stand at his feet

See photo 3:

By doing the above in this manner the hands are able to hold all 4 parts.



Photo 3

Fold the parts upright as indicated on photo 4.

Mount the back-plate First hook 1 side to the mounting knobs and then the other side. Then tighten the knobs by hand. **Note:** the small part of the knob (see arrow on photo 7) must stick through the hole.



Photo 4



Photo 5

Mount the clamp (other type than on the photo), using the 4 star knobs. The tension which occurs on the top part removes the last possible tolerance out of the Stand. Tighten them firmly by hand (see photo 6)

Mounting knob, the arrow points to the part which has to stick **through** the holes. Not on to the side.



Photo 6

Mount the Monitorbracket to the Plasma screen and hook it onto the clamp. See photo 8. Turn the hooks on the clamp on to the mounting knobs to secure the bracket.



Photo 8



Photo 7